SIEMENS



Gigaset 2410 Cordless Telephone System with Answering Machine

Owner's Manual

Se Incluyen Instrucciones en Español

Welcome!

Congratulations on your purchase of a 2.4 GHz Gigaset Cordless Telephone System that has been manufactured to the highest standards of Siemens.

The Gigaset's 2.4 GHz frequency and high-speed digital voice encoding provide reception that is superior to other cordless technologies and almost indistinguishable from corded phone systems. Frequency hopping spread spectrum technology ensures unparalleled security.

TO GET THE BEST PERFORMANCE OUT OF YOUR TELEPHONE SYSTEM, IT IS VERY IMPORTANT THAT YOU READ THIS OWNER'S MANUAL.

Customer Service For customer service In the U.S. or Canada Call (888) 777-0211

Diagram of Handset

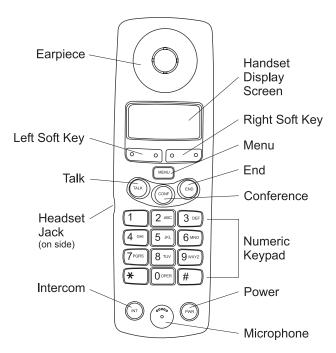


Diagram of Base

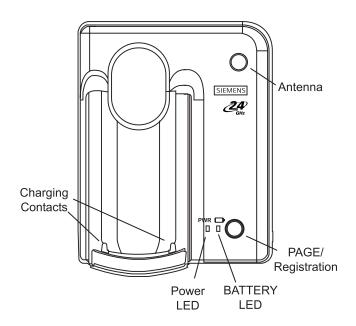


Table of Contents


Chapter 1 - Installation 6
Chapter 2 - Additional Handsets and Chargers 9
Chapter 3 - Getting Started 10
Chapter 4 - Features 13
Chapter 5 - Caller ID/Call Log 19
Chapter 6 - Directory 22
Chapter 7 - Personalizing Your System 26
Chapter 8 - Troubleshooting 32
FCC Information 37
Limited Warranty 38
Spanish Instructions 39
Capítulo 1 - Instalación 41
Capítulo 2 - Auriculares y cargadores adicionales 44
Capítulo 3 - Preparación45
Capítulo 4 - Funciones48
Capítulo 5 - Identificador de llamadas/Registro de llamadas 53
Capítulo 6 - Directorio55
Capítulo 7 - Personalización del sistema 58

Installation

CONTENTS OF SYSTEM BOX

Before installing your Siemens Gigaset 2410 Telephone Answering System, check the shipping carton to be sure you have the following:

- Base Unit
- Cordless handset
- Power Supply
- Owner's Manual
- Quick Reference Guide for System
- Handset Accessory Kit:
 - Belt Clip
 - 2 AA Ni-Cd batteries
 - Battery Door Cover

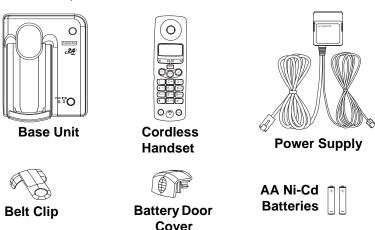

Notes:

- Keep the shipping carton and packaging in case you need to transport your phone.
- If the equipment is damaged, do not use it. Return it to the place of purchase.


INSTALLING THE BASE

For optimal performance,

- Install the base AWAY from electrical appliances such as televisions, personal computers, microwave ovens, or other cordless phones.
- Use the handset AWAY from microwave ovens and other cordless phone base units



Use only the Siemens AC power supply provided with this phone. DO NOT use an outlet controlled by a wall switch.

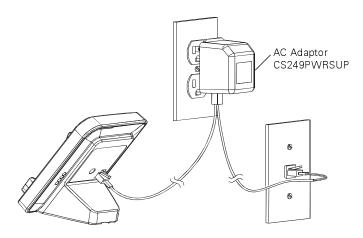

Note: Place the base unit on a hard, flat surface. It cannot be wall mounted.

Connection to both a phone wall jack and a standard 110/120 volt outlet is required.

To install the base,


- Locate the larger of the two connectors (RJ 45) and plug it into the back of base unit.
- 2. Plug AC power supply into a standard 110/120 VAC wall outlet.
- 3. The PWR light on the base unit will illuminate.
- 4. Plug the smaller of the two connectors (RJ 11) into a wall telephone jack.

INSTALLING THE HANDSET


Handsets are powered by 2 AA-sized rechargeable batteries. Nickel Cadmium (Ni-Cd) batteries come with the system. You may also use Nickel Metal Hydride (NiMH) batteries. Batteries charge automatically when the handset is placed in the base cradle.



Use only Ni-Cd or NiMH batteries. DO NOT use Alkaline or any other type of battery.



- 1. Remove the 2 AA rechargeable Ni-Cd batteries from handset accessory kit.
- 2. Insert the batteries into handset as shown.
- 3. Remove the battery door cover from handset accessory kit and insert into grooves until it latches.
- Place the cordless handset into base cradle. The handset may charge with the display facing in or out. The **Battery LED** on the base will illuminate.




5. Fully charge the batteries for 8 to 12 hours before initial use.

INSTALLING THE BELT CLIP

Installing the belt clip enables you to transport the handset on your belt.

- 1. Remove belt clip from handset accessory kit.
- 2. Place the belt clip at the top of the handset back.
- 3. Snap the pins on the inside of the belt clip's arms into the pin holes near the handset's earpiece.







Additional Handsets and Chargers

The handset that comes with the system is pre-registered to the base unit. Up to four handsets may be registered to the base units. You may also register a handset with two different base units. Only one handset can register at a time. You may, at your option, purchase additional Gigaset 2400 handsets (up to four per system) with separate chargers.

- Place handset to be registered next to base. Both the base and the handset must be on.
- 2. The handset will display "Please Register." Press OK.
- 3. Enter System PIN and press **OK**. If you have not changed the PIN, it is 0000 (zeros). See next chapter for Assigning PINs.
- 4. The display will read "Registering." Press and hold down the Page/Registration key on the base (solid black button on lower left-hand side of base) for 4-5 seconds until the Power LED, to its immediate right, begins to flash.
- When the base and handset connect, the handset display will allow you to select an intercom number. Only valid choices will be displayed. Press OK.
- 6. You will receive visual confirmation of registration: "Intercom X Registered."
- 7. The handset is now ready for use.

Charger for Additional Handsets

The charger cradle can be installed on a flat surface or mounted on the wall. It must be connected to an AC power outlet.

There are two battery charge icons in the lower left corner of the charger cradle. The light under the icon on the right indicates whether the cordless handset's batteries are being charged. It should be ON when charging.



Note:

The battery charge icon lights may turn OFF periodically during charging. This is normal.

Charger Reserve Compartment

You may purchase two spare AA rechargeable Ni-Cd or Ni-MH batteries and store them in the charger reserve compartment in the back of the charger cradle. The "R" on the left icon on the charger cradle stands for "Reserve." The light under this icon indicates whether the batteries in the charger cradle's spare battery compartment are charging.DO NOT use non-rechargeable or renewable batteries. When you replace the batteries, replace both batteries.

Optional Headsets

The handset supports an electret-type headset with a 2.5-mm plug, purchased separately. Plug the headset into the socket on the right side of the cordless handset.

Getting Started

Up to four cordless handsets may be used with your Gigaset 2410 base unit. Any combination of two handsets may be engaged in calls at the same time. For example, Handset 2 and Handset 3 can talk to an outside caller while Handset 1 and Handset 4 talk on an intercom call.

Handset features may be accessed through dedicated hard keys **TALK**, **CONF**, **MENU**, **END**, **INT**, or two softkeys located directly under the display. The softkeys are defined by the text or icon immediately above them. Pressing **MENU** and the **a** and **b** keys scrolls through



the list of menu options. Pressing the soft key under the MENU key, or ok when the dashed line is highlighted move the menu to the previous level. The dashed line indicates the end of a menu list. Pressing takes you all the way out of the MENU.

ANSWERING CALLS

- If the handset is in the charging cradle, the call will be automatically answered after picking up the handset.
- 2. If the handset is <u>not in</u> the charging cradle, press (TALK) to answer the call.

MAKING/ENDING CALLS

External Calls

- 1. Press (TALK)
- 2. Dial the number.
- 3. To hang up, press (END) or return the handset to charging cradle.

Internal Calls (Intercom Calls)

- 1. Press on the handset.
- To call an individual handset when you hear the internal dial tone (a pattern of three short beeps followed by a pause), select the number of the desired handset (a number from 1-4). You may also select the number from the Internal Dialing list, which shows the names assigned to other handsets.
- 3. Press * or select "All" and then **OK** to call all handsets. All phones will ring, but only one can answer the call.

4. To hang up, press (END) or return the handset to the charging cradle.

Note: Intercom calls are only possible if more than one handset is registered to the base unit.

ASSIGNING PINS

PINs (Personal Identification Numbers) enable you to control access to the base/system and handset settings. You may personalize each handset or the base/system unit with a PIN.

Note: The factory-set default PIN for both the base/system and handset is 0000 (zeros).

To set a new base/system PIN:

- 1. Press MENU
- 2. Scroll to "System Settings," and press **OK**.
- 3. Enter existing PIN, and press **OK**. *Note: Default system PIN is 0000 (zeros).*
- 4. Scroll to "System PIN," and press **OK**.
- 5. Enter the desired PIN. It must be 4 digits.
- 6. Confirm new system PIN, and press OK.
- 7. A successful entry will be acknowledged with a single beep.

To set a new handset PIN:

- 1. Press **MENU**
- 2. Scroll to "Mobile Settings," and press **OK**.
- 3. Scroll to "Local Settings," and press **OK**.
- 4. Scroll to "Change PIN," and press OK.
- 5. Enter existing PIN. Note: Default handset PIN is 0000 (zeros).
- 6. Enter the desired PIN. It must be 4 digits.
- 7. Confirm new handset PIN, and press **OK**.
- 8. A successful entry will be acknowledged with a single beep.

REDIAL

You may redial any of the last five external numbers dialed from a handset.

- 1. Press **REDIAL** on the handset.
- 2. Use and to view the redial numbers and to dial the displayed number.

3. You may also delete the redial numbers or move them to the handset directory. With a redial number on the screen, press **OK** to see the options.

Note: Redial numbers are unique to each handset.

HOLD

External calls may be placed on hold. Internal (intercom) calls cannot be held. Any system handset or a parallel (non-system) phone may pick up a held call. Only one call can be on hold at a time. **HOLD** cannot be used during a conference call.

To place a call on hold, you must be engaged in an active, external call.

- 1. Press the **HOLD** softkey on the handset.
- 2. The "line in use" icon will flash on the handset(s).
- 3. To resume the call, press TALK on any handset.



CALL WAITING

To use Call Waiting,

- 1. Press (TALK) to answer the incoming call when the Call Waiting signal is heard.
- 2. Press (TALK) to return to the previous call.

Note: The Call Waiting signal requires subscription to the Call Waiting feature from your local telephone company.

Features

AUTO BACKLIGHT

The Auto Backlight feature illuminates the display while you are pressing keys and will continue to stay lit for several seconds afterward.

CALL TIMER

The call timer records the duration of a call. The timer is located in the upper-right corner of the handset display screen. It begins timing the call from the moment

TALK is pressed. It stops when END is pressed or when the handset is returned to the charging cradle.

PULSE DIALING

To change the dialing mode from tone to pulse,

- 1. Press **MENU**
- 2. Select "System Settings" and press **OK**.
- 3. Enter PIN. Note: Default system PIN is 0000 (zeros).
- 4. Select "Dial Mode" and press **OK**.
- 5. Select "Pulse Dialing" and press **OK**. A \checkmark appears next to Pulse Dialing.

TEMPORARY TONE

If your phone line is set to pulse dialing, you can access bank facilities and telephone answering machines through the handset's temporary DTMF menu.

- 1. Press (TALK)
- 2. Press **MENU**
- 3. Scroll to "Temp DTMF On/Off" and press **OK**.
- 4. Dial number. The handset will reset automatically when the call ends.

PREDIALING

Predialing, also known as Block Dialing, allows you to enter and edit a number before receiving an external dial tone.

- 1. Dial the number (up to 32 digits) by pressing the keys on the handset.
- 2. To enter a pause, press **OK**, select "Insert Pause," and press **OK** again.
- 3. If necessary, edit the number by using the softkeys.

- Pressing deletes the character to the left of the cursor.
- The **≤** and **≥** keys position the flashing cursor.
- To insert a digit, position the cursor to the right of the desired location and enter the digit.
- 4. Press (TALK) to dial the number.

TRANSFER

Transferring a call involves moving an external call from one handset to another. Internal (intercom) calls may not be transferred.

- 1. Place an external call on **HOLD**.
- 2. Place an intercom call to another handset.
- 3. Announce the call to the person who answers.
- 4. Press (END) to hang up.
- 5. The person who receives the call presses (TALK) to accept the call.

CONSULTATION CALL

To consult with another intercom party while engaged in an external call,

- 1. Place the external call on **HOLD**.
- 2. Dial the internal (intercom) party.
- 3. Confer with the internal caller. The internal caller presses (END) to terminate the intercom call.
- 4. Resume the original call by pressing (TALK).

CALL PENDING

When engaged on an intercom call, the system alerts when an external call is being received.

- 1. When an external call comes in, a tone will sound.
- 2. Other system handsets and non-system (parallel) phones will ring.
- 3. The handset display shows "Call Pending" with a softkey to "ACCEPT" on the handsets connected in an intercom call.
- 4. Press the (TALK) key or the "ACCEPT" softkey on the handset. Both parties of the intercom call are now connected to the outside caller.
- 5. Press (END) to hang up. The intercom call must be reestablished.

CALL BARGE IN

If more than two system phones try to pick up the call or if a system handset tries to pick up a call with two system handsets already connected, an error tone will sound and "Line Occupied" will show on the handset display.

Note: A parallel (non-system) telephone may access the external line even if two 2410 parties are on the line.

ROOM MONITOR

The Room Monitor feature alerts when abnormal sound levels are present in the area of one or more monitored handsets.



An incoming call will not ring on handsets in the Room Monitor mode. Handsets not in the Room Monitor mode or non-system handsets will ring. The call will show on the handset's display, and may be picked up by pressing TALK.

1. Press **MENU**

Note:

- 2. Scroll to "Room Monitor"; press OK.
- 3. Select "Monitor Room"; press **⊙K** until a **√** appears next to "Monitor Room."
- 4. Select "Set Call Number"; press **OK**.
- 5. Enter the handset number (it must be one other than the handset you are using); press **OK**, or enter * to call all phones in the system.
- 6. Select "Set Level," and press **OK**. There are three noise levels that will trigger a call. To set the level on the room monitor, use the **■** and **■** keys. The Level 1 setting requires the least amount of noise to trigger a call; Level 3 requires the greatest amount.
- 7. Press **OK** then END

Note: The handset remains in the Room Monitor mode until you disable it.

To disable the Room Monitor:

- 1 Press MENU
- 2. Select "Room Monitor"; press **OK**.
- Scroll to "Monitor Room"; press **OK** until a ✓ appears next to "Monitor Room."
- 4. Press **OK** to remove \checkmark and then $\stackrel{\text{END}}{}$ to return handset to idle state.

Note: An incoming call will not ring on handsets in the Room Monitor mode.

Parallel phones will ring. You will see the call on the handset's display,

and you may pick up the call by pressing (TALK)

THREE WAY CALLING (CONFERENCE)

Conferencing allows you join three parties (two internal and an external) in a conversation.

- 1. Dial the external number or answer the call if it is an incoming call.
- 2. The second system handset presses (TALK) to enter the call.
- 3. All three parties are now connected to the call.
- 4. Either party may drop out during the call by pressing (END) and the remaining party will stay connected to the external line.
- 5. When finished, press END.

Note: Only two system handsets can join in a conference call.

KEYPAD LOCK

Cordless handset keypads may be locked to protect against inadvertent key presses or unauthorized use.

To enable:

- 1. Press (PWR) for less than 1 second. A longer press turns the handset OFF.
- 2. The screen will display "Keyboard Protected"

To disable:

- 1. Press (PWR) for less than 1 second. A longer press turns the handset OFF.
- 2. The screen will display "Keypad Unprotected"

Note: An incoming call will temporarily release the keypad protect. Once the call is over, the keypad is protected again.

TELEPHONE LOCK

This feature is similar to the Keypad Lock. The main difference being that Emergency 911 calls may still be made while in Telephone Lock mode.

To set Telephone Lock,

- 1 Press **MENU**
- 2. Scroll to "Telephone Lock" and press OK.
- 3. Enter handset PIN. Note: Default PIN is 0000 (zeros).
- 4. The handset is now locked.

To make a 911 call,

- 1. Press (TALK)
- 2. The display prompts "Call 911?"
- 3. Pressing **YES** or (TALK), causes the handset to dial 911 automatically.
- 4. By pressing **NO** or (END), causes the handset to return to the locked state.

To disable Telephone Lock,

- 1. Press **MENU**
- 2. The display shows "Telephone Locked." Press **OK**.
- 3. Enter the handset's PIN. Note: Default PIN is 0000 (zeros). Press OK.
- 4. The handset is now unlocked.

TONES

Handset tones (Key Click, Battery Warning, Range Warning, Acknowledge, Error Tone, Sync Tone) may be turned ON or OFF.

- 1 Press **MENU**
- 2. Scroll to "Mobile Settings" and press **OK**.
- 3. Scroll to "Local Settings" and press **OK**.
- 4. Scroll to "Tones" and press OK.
- Scroll to the appropriate tone and press **OK**. This will insert/remove the ...
- 6. Toggle the 🎻 to enable/disable.
- 7. Press END

LOW BATTERY INDICATION

When the battery begins to run low, a battery icon, , on the cordless handset display indicates the battery charge level. A clear battery icon and a long beep every 30 seconds signal low battery power. Return handset to charging cradle.

LOCATE HANDSET

- 1. Press the **Page/Locate** button on the base unit for 1 to 4 seconds.
- 2. All handsets will ring, enabling you to locate them.
- 3. To locate an individual handset from another handset, press (INT) and the number assigned to that handset.

Caller ID/Call Log

Caller ID and Caller ID on Call Waiting are optional subscription services provided by local telephone companies. The system generates a Caller ID record for every incoming external call and for each 'Call Waiting call' that includes Caller ID information.

Caller ID information is shown on the handset display. It shows the name and number of the caller, and time and date of the call



Note: If you do not subscribe to Caller ID with name, the name will not appear.

The Call Log stores information for incoming external calls. The Call Log maintains a list of the last 50 calls received. Call Waiting calls are also included in this list if you have subscribed to Caller ID on Call Waiting. Entries are viewed one at a time and are always shown in reverse chronological order, that is the most recent call is shown first and scrolling down in the Call Log will show the next most recent call.

Items Stored in the Call Log

Caller Name

The calling party name is displayed as received from the telephone company. If more than 16 characters are received, only the first 16 are displayed.

Time and Date

The time and date are received as part of the Caller ID message and are stored in the Call Log. If the information is not received as part of the message, 1/1 and 0:00 will be stored in the Call Log as the time and date.

Incoming Calls

The Incoming Call screen shows an incoming call on the second ring and includes the calling name and number.

Blocked Calls

A "Private Call" screen shows a call with "blocked" Caller ID information. This means that the Calling Name (as well as Calling Number) for the call was blocked.

Unavailable Calls

The "Unavailable" or "Unknown Calls" screen shows a call with "unavailable" Caller ID information. This means that there was no information available for the call.



Call Log

Call Logs contain information about incoming external calls. You may view entries, dial numbers associated with Call Log entries, save entries to local handset directories, delete entries, or delete all Call Log entries.

Multiple handsets may access the Call Log simultaneously. Since any handset may delete entries, an entry may be deleted while being viewed by another handset. If this happens, the entry will continue to appear on the other handset until that handset selects another entry.

Note: When a handset is in the Call Log and receives an incoming call, it exits the Call Log and displays the received call information.

Accessing the Call Log

- 1 Press MENU
- 2. Select "Call Log" and press OK.
- 3. Use the and to view the Call Log entries.

Call Log information is contained on the first three lines of the handset display. Line 1 shows the date and time of the most recent entry. Line 2 shows the Caller ID (Name, Unavailable, or Private) followed by the number of times the person called. Line 3 shows the Caller ID number followed by the Answered (A), and Called Back (C) flags.

Note: If the number of times called is not greater than one, the number of times called is not shown. Repeat calls are shown to a maximum of nine. If the time and date were not received from the network before the call arrival, the time and date are not shown.

 To call a number from the Call Log, press (TALK) when the name/number is on the screen.

Note: See Chapter 7 - Personalizing Your System, to configure call number area codes.

- To delete a number from the Call Log, press DEL when the name/number is on the screen.
- 6. The "Call Log End" screen appears at the end of the Call Log.
- 7. Press S or **OK** to return handset to the idle state.
- 8. The "Unavailable" screen appears if you do not subscribe to Caller ID or data was not received before a call was answered.

Accessing the Call Log Menu

- 1. Press **OK** while viewing a Call Log entry to display the Call Log menu.
- If "Return Call" is chosen and an external line is available, the system calls the number. The "Called Back" flag (indicated by a C to the right of the phone number) will display even if the line is busy.

Note: If 10-digit dialing in the local area code is required and only the 7-digit number shows, the call attempt may fail. See Chapter 7 - Personalizing Your System, to configure call number area codes.

3. If "Save to Directory" is chosen, the handset exits the Call Log and stores the number using the name and number data from the Call Log entry. The user may modify the Call Log entry before saving to the directory. If the directory memory is full, an error tone sounds.

Note: The "Return Call" and "Save to Directory" options do not appear if the entry does not contain a phone number.

- 4. If "Delete Call Log" is chosen, you will be asked if you want to delete all entries. Press **OK** to delete all. Press or **MENU** to return to the previous screen, and no entries are deleted.
- 5. The "All Entries Deleted" screen will display if you select **OK**.

Directory

Directories allow storage of up to 120 frequently used phone numbers in alphabetical order. The number of entries that can be stored depends upon the length of the name and number. A Directory can also be sent from one cordless handset to another without replacing any existing Directory entries at the receiving handset.

Create or Add Entries to the Directory

1. Press **MENU**

Note:

- 2. Select "Directory" and press OK.
- 3. Select "New Entry" and press OK.
- 4. Enter Name (up to 16 characters), and then press

 to go to the next line.
- 5. Enter the Number and press **OK**.

Using the keypad on the handset, enter letters or digits depending on how many times a key is pressed. For example, when entering a name, the "2" key enters "a" with one press, "b" with two presses, "c" with three presses, and "2" with four presses. Use the "*" key to capitalize and the "1" key to space. You may edit entries using the ☐ and ☐ keys. The ☐ deletes the character to the immediate left of the cursor.

For more text entry options, please refer to Chapter 7 - Entering Letters and Punctuation.

6. Select "Save Entry" and press **OK**. The display will show "Entry Stored."

Directory Access

- 1. Press the soft key under **DIRCTRY** in the display.
- 2. Select an entry and press (TALK) to place a call or,
- 3. Press **OK** to see the following options:
 - Dial Number
 - Edit Entry
 - Delete Entry
 - Send Entry
- 4. Select any of the above options and press **OK** to activate.
- 5. Press **OK**, **S** or **MENU** to return to the previous screen.

Working with Individual Entries

Select an Entry

Once names and numbers have been entered in the directory, you may "Dial Number," "Edit Entry," "Delete Entry," or "Send Entry" to another handset.

- 1. Press **DIRCTRY**
- 2. Either scroll to the name, or press the handset key to go to entries beginning with a particular letter. (e.g., press the 3 key twice to go to entries beginning with the letter E.)

Place a Call from the Directory

- Press DIRCTRY and scroll with the and very select the number to dial. You may also access names within the Directory by entering the first letter of the entry (e.g., pressing the "6" key twice to get "n" if you want to reach "Nancy.")
- 2. Press (TALK) to connect.

Edit an Entry

Each Directory entry has two fields that may be edited: the Name and the Number. After selecting the entry to edit,

- 1. Select "Edit Entry", and press **OK**. The name will start flashing, indicating you can change it.
- 2. To overwrite the whole name, use the key to delete the old name and start entering the new name.
- 3. To edit the number, press the **≤** key until the number starts flashing.
- 4. To overwrite the whole number, use the key to delete the old number and start entering the new number.
- 5. When finished editing the entry, press **OK**.
- 6. Press **OK** again to "Save Entry."
- 7. Press (END)

Delete an Entry

- 1. Select the entry to delete and press **OK**.
- 2. Select "Delete Entry" and press **OK**.
- 3. The screen will display "Entry Deleted."
- 4. Press END

Send an Entry

To copy a particular Directory entry to another handset, select the entry on the handset that contains the entry (e.g., "Handset 1").

- 1. Select the entry to send and press **OK**.
- 2. Select "Send Entry" and press **OK**.

- 3. Enter the number of the handset to which the Directory should be sent, (e.g. Handset 2) and press **OK**.
- Handset 2 will start ringing. 4.
- Press (TALK) on Handset 2. "Receiving Mode Enter PIN" will be shown in the 5 display.
- 6 Enter Handset 2's PIN. "Data Transfer in Progress" will show on display.
- 7. To send additional entries, use the
 and
 keys to select entry and press "Send."
- Press (END) on Handset 1 when finished.

Other Directory Functions

Instead of working with individual Directory entries, you may work with the entire Directory. The following functions are possible when working with the entire directory: "Delete Directory", "Send Directory", "Check Memory".

Delete Directory

- Press **MENU** 1.
- 2 Select "Directory" and press **OK**.
- 3. Select "Delete Directory" and press **OK**.
- Enter handset PIN. Note: Default handset PIN is 0000 (zeros). 4.
- 5. When the display shows "Delete All Entries?," press OK.



- 6. The display shows "All Entries Deleted."
- Press (END) 7.

Send Directory

Entire Directories may be transferred from one handset to another. If the other handset does not have enough storage space, an error tone sounds and the transfer process does not complete.

- Press **MENU** 1.
- 2. Select "Directory" and press **OK**.
- 3. Select "Send Directory" and press **OK**.
- 4 Enter the number of the handset to which the Directory should be sent and press **OK**.
- 5. That handset will start ringing.
- Press (TALK) on the ringing handset. 6.
- 7. Enter that handset's PIN and press **OK**.
- 8. The handset display will show "Data Transfer in Progress."



When finished, the originating handset display will show "Send Directory".
 Handset 2 will return to the idle state.

Check Memory

You may check how much memory is available for your Directory.

- 1. Press **MENU**
- 2. Select "Directory" and press **OK**.
- 3. Select "Check Memory" and press **OK**.
- 4. Display shows what percentage of the Directory memory is not in use.
- 5. Press END

Personalizing Your System

LANGUAGE

The handset can display menus in English, Spanish, and French.

- 1 Press MENU
- 2. Select "Mobile Settings" and press **OK**.
- Select "Local Settings" and press OK.
- 4. Select "Language" and press **OK**.
- 5. Select "English", "Español", or "Français".
- If you accidentally change to Spanish, you can revert back to English by pressing MENU and selecting "Config. Teléfono", "Ajuste Local", "Idioma", and "English".
- If you accidentally change to French, you can revert back to English by pressing MENU and selecting "Config. Combine", "Reglages Combine", "Langue", and "English".

VOLUME SETTINGS

Handset Volume

- 1 Press **MENU**
- 2. Select "Mobile Settings" and press OK.
- 3. Select "Handset Volume" and press OK.
- 4. Use and at to adjust the handset volume.
- 5. Upon reaching the desired volume level, press **OK**.

Ringer Volume

- 1. Press **MENU**
- 2. Select "Mobile Settings" and press **OK**.
- 3. Select "Ringer Settings" and press OK.
- 4. Select either "Line 1 Ringer," or "Intercom Ringer" and press **OK**. (Line 2 is used when the handset is registered to other Gigaset Systems.)

Note: Both may be adjusted, but they can only be adjusted one at a time.

- 5. Select "Ringer Volume" and press **OK**. The handset will ring.
- 6. Use and to adjust the ringer volume. The handset sounds a sample tone at the chosen volume setting. There are seven levels including mute.

Volume Level 6 represents the highest level and Volume Level 0 (zero) represents mute

Ringer Pitch 16

- 7. Upon reaching the desired volume level, press **OK**.
- An acknowledgement tone sounds and the handset returns to the previous menu.

Note: Press (END) to exit without saving changes.

Ringer Pitch

You may also change the pitch of individual handsets.

- 1 Press **MENU**
- 2. Select "Handset Settings" and press **OK**.
- 3. Select "Ringer Settings" and press **OK**.
- 4. Select either "Line 1" or "Intercom Ringer" and press **OK**.(Line 2 is used when the handset is registered to other Gigaset Systems.)

Note: Both may be adjusted, but they can only be adjusted one at a time.

- 5. Select "Ringer Pitch" press **OK**. The handset will start ringing.
- 6. Use and change the pitch up and down. There are sixteen positions.
- 7. Press **OK** when set to the desired pitch.
- 8. An acknowledgement tone sounds and the handset returns to the previous menu.

Note: Press (END) to exit without saving changes.

ASSIGN NAMES

Handsets and bases may be personalized with names of your choosing. This feature allows you to associate a name with a particular handset or base and operates like Caller ID for internal (intercom) calls.

To assign a name for the base:

- 1. Press **MENU**
- 2. Scroll to "Base Settings"; press **OK**.
- 3. Select Base Station 1 or Base Station 2; press **OK**. Note: If you have only one base, its default name is Base Station 1.
- 4. Select "Change Name"; press OK.

- 5. Enter a new name by using the handset keypad and press **OK**. (See below for instructions on entering capital letters, punctuation, and spaces.)
- 6. Select "Save Entry"; press OK.
- 7. Press (END) to return the handset to idle.

Note: Names may contain up to 16 characters.

To assign a name for handsets:

- 1. Press **MENU**
- 2. Scroll to "System Settings"; press OK.
- 3. Enter System PIN. Note: Default system PIN is 0000 (zeros).
- 4. Select "Assign Name"; press OK.
- Select the handset to be named. The screen will display a generic name for the handset, such as, "Intercom 1."
- 6. Enter a new name by using the handset keypad; press **OK**. (See below for instructions on entering capital letters, punctuation, and spaces.)
- 7. Select "Save Entry"; press **OK**.
- 8. Press END to return the handset to idle.

Note: Names may contain up to 16 characters.

ENTERING LETTERS AND PUNCTUATION

You may use the numeric keys to enter alphanumeric text. The Directory and assigned handset names are examples of alphanumeric text. Phone numbers and area codes are examples of numeric entries.

The following chart outlines which key is associated with the symbol, letter, or corresponding number. For example, depending on the number of times pressed, the "2" key enters either "a", "b", "c", "2" or " \acute{A} ".

Key Presses Table

	1st								9th	10th
1	Space	1								
2	a	b	c	2	Á	à	â	Ç		
3	Space a d	e	f	3	É	è	ê			

Key Presses Table

Key	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th
4	g	h	i	4	Í	î				
5	j	k	1	5						
6	m	n	О	6	Ñ	ó	ô	œ		
7	p	q	r	S	7					
8	t	u	v	8	Ú	ù	û			
9	w	X	у	Z	9					
0	0	-		,	:	•	?	i	!	i
*	Shift	*	/	()	&	@			
#	#									

To shift to uppercase, press the * key once and then press the appropriate key to display the desired upper case alphabetic character. The * key does not create a "shift lock" condition. You must press the * key to shift to uppercase for each character. To insert a space (for example, between a first and last name), press the "1" key once. To insert one of the punctuation symbols, press "0" or * until the item you want is displayed. If you pass the letter or symbol you want, continue pressing the key and going through the list. When the last item for that key is displayed, pressing the key again will start the list over.

CALLER NUMBER, AREA CODES

The system may be configured (under "System Settings," "Area Codes") to use the local area code and up to three extra area codes which do not require a "1." These extra area codes are used in large cities where local calls use multiple area codes

- If the area code in the Caller ID matches the local area code, the entry will contain the 7-digit number only.
- If the area code in the Caller ID matches one of the "extra" local area codes, the system leaves the area code intact when storing the number to the Directory or dialing the number from the Call Log. The entry will contain the full 10-digit number (Area Code + Number).
- If the area code in the Caller ID matches neither the local area code nor one
 of the "extra" local area codes: The system leaves the full number intact and
 adds a "1" to the front of the number when storing the number to the direc-

tory. When storing to the Directory or dialing from the Call Log, the entry will contain "1 + Area Code + Number."

Note: In the Call Log list, the received number is stored completely independent of any local or extra codes.

Long Distance Prefix

This feature allows you to use alternate long distance carriers or those with "1010+" numbers without switching your normal long distance provider and without having to enter the alternate carrier's prefix at the beginning of every long distance call. If you enter a Long Distance Prefix, the Gigaset 2410 will automatically add the prefix to any call beginning with the international prefix "011" or "1" plus an area code. This number will not be placed in front of any call that has the Local Area Code or any of up to three Extra Area Codes that can be called without long distance charges.

The Gigaset 2410 will not add the carrier's prefix, if the Long Distance Prefix is empty or if the area code you dial is in the following list:

000-199	600	844	882
311	700	855	881
411	800	866	888
456	822	877	900
500	833	880	911

You can override the Long Distance Prefix by manually dialing in a new prefix (1010+).

To enter or edit a Long Distance Prefix:

- 1 Press MENU
- 2. Scroll to "System Settings"; press OK.
- 3. Enter PIN; press **OK**. Note: Default system PIN is 0000 (zeros).
- 4. Scroll to Long Dist. Prefix; press OK.
- Enter Access Number; press OK.
- 6. If required to insert a pause (which allows the phone company's switch enough time to access the alternate long distance service), scroll to "Insert Pause" and press OK. The letter "P" will indicate that a pause has been inserted. Edit or clear the entry using the Rev.
- 7. To Save, select Save Entry and press **OK**.
- 8. The screen will display "Entry Stored."

Deregistering a Handset

Deregistration cancels a cordless handset's registration. You might need to deregister a cordless handset if you decide to transfer a previously registered handset to a different base unit, or if you decide to use a different intercom

number. In either case, you would deregister the cordless handset, then assign the new number during registration.

- 1. Make sure handset is ON and near the base.
- 2. Press **MENU**
- 3. Scroll to "System Settings" and press OK.
- 4. Enter System PIN. Note: Default system PIN is 0000 (zeros).

Note: If you do not see "Deregister" on the menu, then the handset is not registered on that base.

- 5. Scroll to "Deregister" and press **OK**.
- 6. Select the handset you want to deregister and press **OK**.
- An acknowledgement tone sounds and a screen "Intercom X Deregistered" indicates deregistration is complete.

Note: If you deregister your own handset, only an acknowledgment tone is heard.

FACTORY DEFAULTS

To return the system back to the Factory Defaults,

- 1. Press **MENU**
- 2. Scroll to "System Settings," and press **OK**.
- 3. Enter System PIN. Note: Default system PIN is 0000 (zeros).
- 4. The display will show "Reset to Factory Defaults." Press **OK** to continue or press or **MENU** to return to the previous screen without resetting the Factory Defaults.
- 5. The display will show "Settings Reset to Default."
- 6. Press END

Troubleshooting

If you have trouble with your Gigaset 2410, please try the suggestions below. If you still have trouble, call Siemens Customer Service at (888) 777-0211. For TTY Customer Technical Support call (888) 777-0209.

Symptom	Possible Cause
The phone does not work at all	Make sure handset is powered-on.
	Make sure the power cord is plugged into the base and the electrical outlet is not controlled by a wall switch.
	Make sure handset batteries are installed properly and fully charged.
No power on base	Check connections at wall and base.
	Plug base into a different electrical outlet.
	Check outlet for power by plugging other electrical devices into it.
No power on handset	Check battery orientation in handset.
	Make sure handset batteries are fully charged.
	Batteries may need to be replaced; use only AA Ni-Cd or Ni-MH batteries.
	Press the (PWR) button or return handset to cradle. It should turn on when the handset is placed in the charger or base cradle.
No dial tone	Make sure the power cord is plugged into the base and the electrical outlet is not controlled by a wall switch.
	Make sure the base unit is plugged into the telephone wall jack.
	Make sure the handset batteries are installed properly and fully charged.
	Try your Gigaset in a different wall jack and/or a different phone in that jack. If your phone works in a different jack, or no phone works in the existing jack, the problem is in your wiring or local service. Call your local telephone company.
Handset(s) cannot make Outgoing Calls	Make sure the handset(s) are within range of the base unit.
	Cycle power on handset by turning OFF and ON.
	Cycle power on base unit by unplugging power supply and plugging it back in.

Symptom	Possible Cause
Handset(s) doesn't ring on Incoming Call	Make sure the handset(s) are within range of the base unit.
	Make sure ringer is ON and volume is loud enough to hear.
	Make sure the batteries are fully charged.
	Cycle power on handset by turning OFF and ON.
	Cycle power on base unit by unplugging power supply and plugging back in.
Handset(s) cannot make Outgoing Calls	Make sure the handset(s) are within range of the base unit.
	Cycle power on handset by turning OFF and ON.
	Cycle power on base unit by unplugging power supply and plugging back in.
	Make sure keyboard is not protected. Briefly
	press the PWR key.
	If you entered a Long Distance Prefix, ensure that it is correct.
No Caller ID	Make sure you subscribe to the service.
	See Chapter 5.
Can't Join a Call	Only two Gigaset handsets may be used on external line simultaneously.
Can't Transfer a Call	Make sure transferring to an active intercom number.
	Make sure handset you are transferring to is not in Room Monitor mode.
Can't Dial from Call Log	Make sure local area code is set.
	If your city has zones with different area codes, make sure that they are entered as Extra Area Codes.
Static, noise	Check connections.
	Make sure you are within "range" of the base unit.
	Look for possible interfering devices (e.g., microwave ovens).
	Move handset or base to a different location.
Handset displays ""	Press any key on the handset. Handset should start to search for and find the base unit.
	If it recurs, cycle power on the base unit.
Handset displays "Searching" or "Please Register"	Make sure handset is registered to base unit.
i lodge flegister	Make sure base unit is powered-on.
	Make sure handset is within range of base unit.

Symptom	Possible Cause
More than one Handset registers with the same Intercom number	Power off the base unit.
with the same intercent number	Press MENU on both handsets, select "Deregister".
	Reregister the handsets.
Handset displays name other than assigned name	Turn the handset OFF and ON.

IMPORTANT SAFETY INSTRUCTIONS

Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock, and injury to persons and damage to property.

- Read and understand all instructions.
- 2. Follow all warnings and instructions including those marked on the product.
- Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
- 4. Do not use the base unit near water. Examples include near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- 5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from over-heating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
- Do not overload wall outlets and extension cords. This can result in the risk of fire or electric shock.
- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire, electric shock, or injury. Never spill liquid of any kind on this product.
- 10. To reduce the risk of electric shock or burns, do not disassemble this product. Instead, take it to qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current, or other risks. Incorrect re-assembly can cause electric shock when the appliance is subsequently used.
- 11. Unplug the desk station from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. If liquid has been spilled into the product
 - b. If the product has been exposed to rain or water
 - c. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by qualified service personnel to restore the product to normal operation
 - d. If the product has been dropped or cabinet has been damaged
 - e. If the product exhibits a distinct change in performance
- Avoid using telephone during an electrical storm. There may be a risk of electrical shock from lightning.
- 13. Do not use the telephone to report a gas leak in the vicinity of the leak.
- 14. The antenna on the base unit does not retract. To prevent injury, do not place the telephone where persons can step, trip or fall on the telephone.
- 15. Do not place metal objects on the antenna.
- 16. Do not install the base unit or cordless handset charger near microwave ovens, radio equipment, or non-cable connected televisions. These appliances may cause electrical interference to the base unit or cordless handset.
- 17. The base unit must be placed on a hard, flat surface and connected to both a phone wall jack and an AC power outlet.
- The cordless handset charger must be placed on a hard, flat surface and connected to an AC power outlet.
- Do not stick foreign objects into any of the holes on the base unit or cordless handset. You could harm the speakers, earpieces, microphones, or yourself.

BATTERY SAFETY PRECAUTIONS

To reduce the risk of fire, injury, electric shock, or property damage, and to properly dispose of batteries, please read and understand the following instructions.



CONTAINS NICKEL CADMIUM BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.

- 1. Only use type AA Nickel-Cadmium (Ni-Cd) or type AA Nickel-Metal Hydride (NiMH) rechargeable batteries in the cordless handset and reserve battery compartment. DO NOT use other rechargeable batteries or non-rechargeable batteries. The batteries could short-circuit, and the battery shell may be damaged causing a hazardous condition. Instruction labels are located in the handset and charging unit battery compartment.
- Always follow basic safety precautions when using and disposing of batteries. Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.
- 3. DO NOT USE ALKALINE OR LITHIUM BATTERIES IN THE CORDLESS HANDSET BATTERY CHARGER OR RESERVE BATTERY COMPARTMENT.
- 4. Periodically clean the charge contacts on both the charger and handset.
- 5. DO NOT mix old and new batteries in this product.
- 6. Position the positive (+) battery contact to match the diagram in the cordless handset and spare battery compartment.
- 7. Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in this manual.
- Exercise care in handling batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.
- Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
- 10. Only use the same rechargeable battery type. DO NOT combine Ni-Cd and NiMH rechargeable battery types.
- 11. During charging, batteries heat up. This is normal and is not dangerous.
- 12. Do not use non-Siemens charging devices. This could damage the batteries.
- 13. Do not place the batteries in contact with water or fire. DO NOT dispose of batteries in a fire; the cells may explode.
- 14. The RBRC™ Battery Recycling Seal on the nickel-cad mium (Ni-Cd) batteries contained in the battery charger and cordless handset indicates Siemens is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service within the United States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or municipal waste stream, which is illegal in some areas. Please call 1-800-8-BATTERY for information on Ni-Cd battery recycling in your area. Siemens involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

FCC INFORMATION



Changes or modifications to this unit not expressly approved by Siemens Information and Communication Products could void the FCC authority to operate the equipment.

This telephone system complies with Part 68 of the FCC rules. On the bottom of the base unit is a label that contains, among other information, the FCC Registration Number, Ringer Equivalence number |REN) and the Universal Service Order Code |USOC), which is RJ-11C, for this equipment. You must, upon request, provide this information to your telephone company.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the RENs of all devices connected to one line should not exceed five [5.0]. To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

If your telephone equipment causes harm to the telephone network, the telephone company may ask you to disconnect the system from the line until the problem has been corrected or they may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you should be notified as soon as possible. You will be informed of your right to file a complaint with FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your telephone system. If they do, if possible you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone system, disconnect it from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

This telephone system may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. **Privacy of communications may not be ensured when using this phone.**

This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's, to minimize or prevent such interference, the base unit should not be placed near or not port a TV, PC monitor, or VCR; and, if interference is experienced, moving the base unit farther away from the TV or VCR will often reduce or eliminate the interference. However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the base unit and receiver.
- 2. Connect the base unit into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Notice to Hearing Aid Wearers: This phone system is compatible with inductively coupled hearing aids.

Power Outage: In the event of a power outage, your cordless telephone system will not operate. The cordless telephone requires electricity for operation. You should have a telephone which does not require electricity available for use during power outages.

INDUSTRY CANADA CERTIFICATION

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network, protective, operational and safety requirements as prescribe do not be appropriate Terminal E quipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.



Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

LIMITED WARRANTY

This limited, non-transferable warranty is provided to the original purchaser. The product is warranted to be free from defects in materials and workmanship under normal installation, use, and service for period of one (1) year from the date of purchase as shown on the purchaser's receipt. Batteries provided (AA rechargeable Ni-Cd) are warranted to be free from defects at time of purchase.

Our obligation under this warranty is limited to repair or replacement (at our option) of the product or any part(s) which are defective provided that the product is returned to the original place of purchase or an authorized service location during the warranty period. Products returned must be accompanied by a copy of the purchase receipt. In the absence of a purchase receipt, the warranty period shall be one (1) year from the date of manufacture. Repair or replacement of the product is your sole and exclusive remedy. If the product is repaired, reconditioned component parts or materials may be used. If the product is replaced, we may choose to replace it with a new or reconditioned product of the same or similar design. The repaired or replacement product will be warranted for either (a) 90 days or (b) the remainder of the original one (1) year warranty period, whichever is longer.

This warranty does not apply to defects outside of our control, including but not limited to acts of God, fire, flood, damage while in transit to service facility. We do not warranty that the product will be compatible with any telephone equipment or systems or party lines.

This warranty shall be void if the product is damaged as a result of defacement, misuse, abuse, neglect, accidents, destruction, or alteration of the serial number, improper electrical voltages or currents, repaid alteration, or maintenance by any person or party other than our authorized service facility or any violation of instructions furnished by us. This warranty is also void if this product is removed from the country in which it was purchased by the original purchaser, if it is not used in a country which it is not registered for use, or if it is used in a country for which it was not designed. Due to variations in telephone systems and communications laws, this product may be illegal for use in some countries. We assume no responsibility for damages or penalties incurred resulting from the use of this product in a manner or location other than that for which it is intended.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED. ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN LIMITED WARRANTY. WE DISCLAIM ANY LIABILITY FOR DAMAGES FOR LOSS OF USE OF THE PRODUCTS, LOSS OF TIME, INCONVENIENCE, INJURY TO ANY PERSON, OR DAMAGE TO PROPERTY CAUSED BY THE PRODUCT, LOS OF REVENUE OR PROFIT, OR DAMAGES FOR ANY FAILURE TO PERFORM. IN NO EVENT SHALL WE BE LIABLE FOR ANY SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES EVEN IF WE ARE ADVISED OF THE POSSIBILITY OF SUICH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

This warranty is the sole and exclusive warranty provided for the product. There are no other express warranties. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

If you want to learn more about where you can purchase the Siemens Gigaset 2410 system or accessories, please visit our Web site at http://www.siemenscordless.com or call (877) 267-3373.

If you need technical assistance with your Gigaset 2410, please call (888) 777-0211, or for TDD access, please call (888) 777-0209.

Communication Devices Division

SEPTEMBER 1999

Siemens and Gigaset are registered trademarks of Siemens AG.

Communication Devices is a division of Siemens Information and Communication Products LLC.

RBRC™ is a trademark of the Rechargeable Battery Recycling Corporation.

Information subject to change as Siemens reserves the right, without notice, to make changes in equipment design or components as progress in engineering or manufacturing methods warrant.

Order Number: PB241010

Part Number: A30883-N2410-A33

© Siemens 1999 All rights reserved.

SIEMENS



Teléfono Inalámbrico Gigaset 2410

Felicitaciones!

Acaba de adquirir el sistema telefónico inalámbrico Gigaset de 2,4 GHz, fabricado según los estándares más altos de Siemens.

El sistema de codificación digital de alta velocidad y su frecuencia de 2,4 GHz le brindan una recepción superior a la de otros equipos inalámbricos y una claridad casi idéntica a la de los teléfonos convencionales. La tecnología de amplio espectro de selección de frecuencias le garantiza una privacidad inigualable. SÍRVASE LEER ESTE MANUAL DEL USUARIO ANTES DE PROCEDER A LA CONEXIÓN Y UTILIZACIÓN DEL SISTEMA TELEFÓNICO.

Para obtener servicio de atención al cliente En los Estados Unidos o Canadá Sírvase llamar al teléfono (888) 777.0211

Contenidos

Capítulo 1 - Instalación	41
Capítulo 2 - Auriculares y cargadores adicionales	44
Capítulo 3 - Preparación	45
Capítulo 4 - Funciones	48
Capítulo 5 - Identificador de llamadas/Registro de llamadas	53
Capítulo 6 - Directorio	55
Capítulo 7 - Personalización del sistema	58
Garantía limitada	64

Capítulo 1: Instalación

CONTENIDOS DE LA CAJA DEL SISTEMA

Antes de instalar su teléfono inalámbrico Gigaset 2410 de Siemens, compruebe que incluye lo siguiente:

- Base
- Auricular inalámbrico
- Fuente de poder
- Manual del usuario
- Conjunto de accesorios del auricular:
 - Clip para el cinturón
 - Baterías AA de Ni-Cd-pilas
 - Cubierta de las baterías.



Nota:

- Guarde la caja y los empaques en caso que requiera transportar su teléfono.
- Si el equipo estuviera dañado, no lo utilice. Devuélvalo al lugar de compra.


INSTALACIÓN DE LA BASE

Para obtener un funcionamiento óptimo, siga los pasos que se indican a continuación:

- Instale la base en un LUGAR ALEJADO de otros electrodomésticos como televisores, computadoras personales, hornos microondas y otros teléfonos inalámbricos.
- Cuando utilice el auricular, manténgalo separado de hornos microondas y de otras bases de teléfonos inalámbricos.



¡ADVERTENCIA! Utilice sólo la fuente de alimentación provista con este teléfono. NO utilice un tomacorrientes controlado por un interruptor de pared. Diagrama: Instalación adecuada de la base.

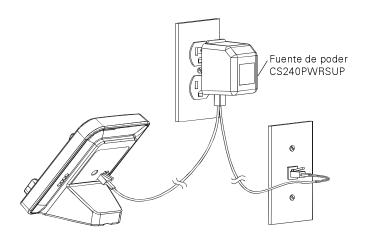

Nota: Instale la base en una superficie firme y plana. No se puede instalar en una pared. Se debe conectar a enchufe telefónico mural y a un tomacorrientes estándar de 110/120 voltios.

- Ubique el conector más grande (RJ 45) y enchúfelo en la parte posterior de la base.
- Conecte la fuente de poder de AC a un tomacorrientes mural estándar de 110/120 VAC.
- Se enciende la luz piloto de la base de la base indicando que el equipo está encendido.
- 4. Enchufe el conector más pequeño (RJ 11) en un enchufe telefónico de pared.


INSTALACIÓN DEL AURICULAR

Los auriculares funcionan con dos baterías AA recargables. Las baterías de níquel cadmio (Ni-Cd) vienen incluidas con el sistema. También puede utilizar baterías

de hidruro metálico de níquel (Ni-MH). Las baterías se cargan automáticamente cuando el auricular se pone en la base.



ADVERTENCIA! Utilice solamente baterías de Ni-Cd o de NiMH. NO utilice baterías alcalinas.




- Retire las 2 baterías AA de NI-Cd recargables del conjunto de accesorios del auricular.
- 2. Introduzca las baterías en el auricular según se muestra en la figura.
- 3. Retire la cubierta de baterías del conjunto de accesorios del auricular e insértela en las ranuras hasta que se enganche.
- Coloque el auricular inalámbrico en la base. El auricular se carga incluso si no esta orientado cara a la base. Se enciende el indicador LED para la baterla en la base.
- 5. Cargue totalmente las baterías por un período de 8 a 12 horas antes de utilizar el teléfono por primera vez.

INSTALACIÓN DEL CLIP PARA CINTURÓN

Este clip le permite llevar el auricular en el cinturón.

- 1. Retire el clip del conjunto de accesorios del auricular.
- Póngalo en la parte superior trasera del auricular. Deslice el clip para insertarlo como se muestra en la ilustración. Inserte los pasadores interiores de los brazos del clip en los orificios laterales del auricular.

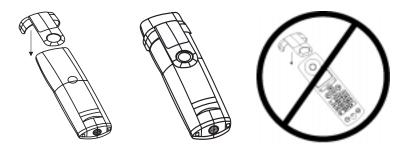

Capítulo 2: Auriculares y cargadores adicionales

El auricular que viene con el sistema está preregistrado a la base. Se puede registrar hasta cuatro auriculares en la base. Tambi[en puede registrar uno con dos controladores de base distintos. Sólo se puede registrar un auricular a la vez.

Puede comprar, si lo desea, auriculares adicionales Gigaset 2400 (hasta 4 por sistema) con cargadores separados.

- Sitúe cerca de la base el auricular que desee registrar. Tanto la base como el auricular deben estar activados.
- El auricular mostrará en la pantalla "Please Register" (Por favor, registre el auricular). Presione **OK**.
- Introduzca el PIN del sistema y luego presione OK. Si el PIN no ha sido modificado, éste es 0000 (ceros) Vea el siguiente capítulo sobre cómo asignar un PIN.
- 4. La pantalla mostrará "Registering" (Registrando). Mantenga presionado el botón Page/Registration (Localización/Registro) de la base (botón negro en la parte inferior izquierda) durante 4 ó 5 segundos hasta que la luz del indicador adyacente parpadee
- Cuando se conecta con la base, la pantalla del auricular permitirá seleccionar un número de intercomunicador para él. Solo se mostrarán las opciones disponibles. Presione **OK**.
- 6. La pantalla confirmará que el auricular ha sido registrado mostrando "Intercom X Registered" (Auricular X registrado)
- 7. El auricular ya está preparado para su uso.

Cargador para auriculares adicionales

El cargador se puede instalar en una superficie plana o puede montarse en un muro. Debe conectarse a un tomacorrientes de AC.

Existen dos iconos de carga de batería en la esquina inferior izquierda del cargador. La luz bajo el icono derecho indica si se están cargando las baterías del auricular. Si permanece encendida indica que está cargando.

Nota: Las luces del icono de batería pueden apagarse periódicamente durante la carga. Esto es normal.

Compartimiento de reserva de carga

Se puede adquirir otras dos baterías AA de Ni-Cd o Ni-MH recargables y guardarlas en el compartimiento de reserva ubicado en la parte posterior del cargador. La "R" en el icono izquierdo del cargador significa "Reserva." La luz bajo este icono indica si se están cargando las baterías que se encuentran en este compartimiento.

NO utilice baterías que no sean recargables. Al cambiar las baterías, reemplace ambas.

Audifones opcionales

El auricular tiene la opción de conectar unos audífonos de tipo electret con un conector de 2.5 mm., el cual se debe comprar por separado. Enchufe los audífonos en el conector hembra a la derecha del auricular inalámbrico.

Capítulo 3: Preparación

Se puede utilizar hasta 4 auriculares con la base de su teléfono Gigaset 2410. Se puede hacer llamadas simultáneas con cualquier combinación de dos auriculares Por ejemplo, los auriculares 2 y 3 pueden realizar una llamada externa mientras el 1 y el 4 pueden efectuar una intercomunicación interna. Se puede tener acceso a las funciones del auricular a través de las teclas marcadas (TALK, CONF, MENU, END, INT) o a través de dos botones ubicados bajo el visor. Los botones están identificados por medio del texto o icono que se encuentra sobre ellos. Al presionar los botones MENU y se se puede desplazar a través de las opciones del menú. Al presionar el botón ubicado bajo se, el botón MENU o el botón otá (cuando la línea segmentada se encuentra destacada) permite volver al nivel anterior del menú. La línea segmentada indica el final de una lista del menú.

Se puede salir del menú presionando (END)

IDIOMA

El auricular puede mostrar los menús en inglés, español y francés.

- 1 Presione **MENU**
- Seleccione "Mobile Settings" (Configuración del móvil) y luego presione
 OK.
- 3. Seleccione "Local Settings" (Configuración local) y luego presione **OK**.
- 4. Seleccione "Language" (Idioma) y luego presione OK.
- 5. Seleccione "English", "Español" o "Francais".
- Si cambia a English por accidente, puede volver a español presionando
 MENU y seleccionando "System Settings," "Mobile Settings," Language" y Español.
- Si cambia a francés por accidente, puede volver a español presionando
 MENU y seleccionando "Config. Combine", "Reglages Combine", "Langue", e "Español".

CÓMO CONTESTAR LLAMADAS

 Si el auricular se encuentra en la base, la llamada se conecta automáticamente al levantarlo. 2. Si éste no se encuentra en la base, se debe presionar (TALK) (Hablar) para contestar la llamada

CÓMO HACER Y CONCLUIR LLAMADAS

Llamadas al exterior

- 1. Presione (TALK)
- 2. Marque el número.
- 3. Al concluir, presione (END) o ponga el auricular en la base.

Llamadas al interior (Intercomunicador)

- 1. Presione (INT) en el auricular.
- 2. Si desea localizar un auricular determinado, seleccione el número de dicho auricular (1 al 4) cuando escuche el tono de discado interno (tres bips consecutivos seguidos de una pausa). El número a marcar es aquel que asigne al registrar el auricular en la base. También puede seleccionar el número de una lista interna, la cual muestra los números asignados a otros auriculares.
- Presione * o "All" (Todos) y luego OX (Aceptar) para llamar a todos los auriculares. Todos los auriculares recibirán la llamada, pero sólo uno puede contestar.
- 4. Al concluir, presione (Fin) o ponga el auricular en la base.

Nota: Las llamadas por intercomunicador sólo se pueden realizar cuando se ha registrado más de 1 auricular en la base.

ASIGNAR PINS

Los PIN (números de identificación personal) le permiten controlar el acceso a la configuración del auricular y de la base/sistema. Usted puede personalizar cada auricular o la base/sistema con un PIN.

Nota: El PIN preprogramado para la base/sistema y el auricular es 0000 (ceros).

Para asignar un nuevo PIN a la base/sistema:

- 1. Presione **MENU**
- Desplácese hasta "System Settings" (Configuración del sistema) y luego presione (Aceptar) ok.
- 3. Introduzca el PIN actual **OK**. Nota: El PIN preprogramado es 0000 (ceros).
- 4. Desplácese hasta "System PIN" (PIN del sistema) y luego presione **OK**.
- 5. Introduzca un PIN nuevo. Este debe estar de 4 dígitos.

- 6. Corrobore el PIN y luego presione **OK**.
- 7. Se escuchará un solo bip cuando el sistema reconozca el PIN.

Para programar un nuevo PIN en el auricular.

- 1. Presione **MENU**
- Desplácese hasta "Mobile Settings" (Configuración del móvil) y luego presione OKI.
- 3. Desplácese hasta "Local Settings" (Configuración local) y luego presione **OK**.
- 4. Desplácese hasta "Change PIN" (Modificar PIN) y luego presione **OK**.
- 5. Introduzca el PIN actual. Nota: El PIN preprogramado es 0000 (ceros).
- 6. Introduzca un PIN nuevo, este debe estar de 4 dígitos.
- 7. Corrobore el PIN, y luego presione **OK**.
- 8. Se escuchará un solo bip cuando el sistema reconozca el PIN.

CÓMO EFECTUAR UN REDISCADO

Se puede rediscar cualquiera de los últimos cinco números externos a los que se ha llamado desde un auricular.

- 1. Presione **REDIAL** en el auricular.
- Utilice los botones
 ■ y
 para ver los números que se pueden rediscar y luego
 (Hablar) para marcar el número deseado.
- También se puede borrar los números para rediscado o transferirlos al directorio del auricular. Una vez que tenga un número en el visor y presione (Aceptar) para ver las opciones.

Nota: Los números para rediscado son exclusivos de cada auricular.

CÓMO PONER LLAMADAS EN ESPERA

Sólo las llamadas externas pueden ponerse en espera, no las internas (Intercomunicador). Cualquier auricular o aparato telefónico paralelo (ajeno al sistema) de su casa u oficina puede conectarse a una llamada en espera. Sólo se puede poner una llamada en espera a la vez. No se puede utilizar HOLD (EN ESPERA) durante una conferencia telefónica.Para poner una llamada en espera, se debe estar recibiendo una llamada externa.

- 1. Presione el botón **HOLD** (EN ESPERA) en el auricular.
- 2. Destella el indicador "line in use" (línea ocupada) en el auricular.
- 3. Para retomar la llamada, presione (TALK) (Hablar) en cualquiera de los auriculares.

LLAMADA ENTRANTE EN ESPERA

- 1. Presione (TALK) para contestar la llamada entrante cuando escuche la señal.
- 2. Presione (TALK) nuevamente para regresar a la llamada en curso.

Nota: Para conseguir esta señal, se debe contratar la función Llamada entrante en espera de su compañía de teléfonos local.

Capítulo 4: Funciones

ILUMINACIÓN AUTOMÁTICA

Esta función ilumina la pantalla al presionar los botones, y permanece encendida por varios segundos luego de pulsado el último.

CONTADOR DE TIEMPO DE LLAMADA

Esta función registra la duración de una llamada. El contador se encuentra en la parte superior derecha de la pantalla del auricular. Este comienza a registrar la duración de la llamada desde el momento en que se escucha el tono de marcar. El contador se detiene cuando se desconecta la llamada.

Tono temporal

El equipo viene configurado de fábrica para el sistema de discado por tono. Si su línea está configurada para discado por pulsos, puede tener acceso a las funciones de bancos de datos y contestadoras telefónicas a través del menú DTMF temporal del auricular.

- 1. Presione (TALK)
- 2. Presione **MENU**
- Desplácese hasta "Temp DTMF On/Off" (DTMF temp Activar/Desactivar) y luego presione **OK**.
- Marque el número. El auricular volverá a la configuación estándar al finalizar la llamada.

PREDISCADO

El prediscado, también conocido como discado en bloques, le permite ingresar y editar un número antes de recibir un tono de de discado externo.

- 1. Marque el número (hasta 32 dígitos) con los botones del auricular.
- Presione **OK** para introducir una pausa y desplácese hasta "Insert Pause" y luego **OK**.
- 3. De ser necesario, edite el número utilizando los botones.

- Al presionar el botón [?] se borran los caracteres a la izquierda del cursor
- Para insertar un dígito, ubique el cursor a la derecha del lugar deseado e introduzca el dígito.
- 4. Presione TALK para marcar el número.

CÓMO TRANSFERIR UNA LLAMADA

Una transferencia de llamadas es trasladar una llamada externa de un auricular a otro. No se puede transferir las llamadas internas (Intercomunicador). Existen dos tipos de transferencia: Con aviso y Sin aviso.

Transferencia con aviso.

- 1. Ponga **HOLD** (En Espera) la llamada externa.
- 2. Intercomuniquese con otro auricular.
- 3. Avísele a la persona que contesta.
- 4. Presione (END) (Fin) para colgar.
- 5. La persona que recibe la llamada debe presionar (TALK) para aceptarla.

LLAMADA DE CONSULTA

Se puede hablar con otra persona a través del intercomunicador mientras se recibe una llamada externa.

- 1. Ponga **HOLD** (En Espera) la llamada externa.
- 2. Marque el números interno que desea (Intercomunicador).
- 3. Hable con la persona interna. Dicha persona debe presionar el botón (Fin) para concluir la intercomunicación.



LLAMADA PENDIENTE

Al encontrarse haciendo una intercomunicación, el sistema le avisará cuando se reciba una llamada externa.

- 1. Dos auriculares se encuentran en intercomunicación.
- 2. Cuando se reciba una llamada, sonará un tono.
- Se escuchará la campanilla en los teléfonos no pertenecientes al sistema (paralelos).
- El auricular muestra "Call Pending" (llamada pendiente) con un botón "ACCEPT" para aceptar.
- 5. Presione (TALK) o "ACCEPT".

6. Presione (END) (FIN).

INTERRUPCIÓN DE LLAMADA

Al levantar un auricular del sistema u otro teléfono de la casa se obtiene acceso a la línea externa, a menos que más de dos auriculares del sistema lo intenten al mismo tiempo. Si este último es el caso, o si un tercer auricular intenta conseguir línea, sonará un tono de error y aparecerá "Line Occupied" (Línea ocupada) en la pantalla del auricular.

Nota: Un teléfono paralelo (ajeno al sistema) puede conseguir línea externa

aún con dos auriculares del 2410 todavía en ella.

MONITOREO DE HABITACIONES

El monitoreo de habitaciones le alerta de niveles de ruido anormales en las inmediaciones de uno o más auriculares.

Nota: Al recibirse una llamada no sonará la campanilla de aquellos

auriculares que se encuentren en la función monitoreo. Sonarán solo los auriculares que no se hallen en la función de monitoreo. La llamada se mostrará en la pantalla del auricular y es posible contestar a la misma presionando TALK (Hablar).

- 1 Presione **MENU**
- 2. Desplácese hasta "Room Monitor" (Monitoreo de habitaciones) y luego presione **OK** (Aceptar).
- 3. Seleccione "Monitor Room" (Monitor de habitaciones), presione **OK** hasta que aparezca una dadyacente al mismo.
- Seleccione "Set Call Number" (Especificar número) y luego presione OK (ACEPTAR).
- Introduzca el número del auricular (diferente del que está usando) y presione
 (Aceptar) o introduzca * para llamar a todos los auriculares del sistema.
- 6. Seleccione "Set Level" (Especificar nivel) y luego presione OK (Aceptar). Hay tres niveles de ruido que activarán una llamada. Para especificar el nivel de monitoreo de habitaciones, utilice las flechas

 y

 . El nivel 1 se activará con un nivel de ruido mínimo, mientras que el nivel 3 lo hará con el máximo.
- 7. Presione **OK** (Aceptar) y luego END (Fin).

Nota: El auricular permanecerá en la función de monitoreo hasta que ésta se desactive.

Para desactivar la función de monitoreo,

1. Presione **MENU**

- Seleccione "Room Monitor" (Monitoreo de habitaciones) y luego presione
 (Aceptar).
- Desplácese hasta "Monitor Room" (Monitor de habitaciones), presione on hasta que aparezca una devacente al mismo.
- 4. Presione **OK** (Aceptar) para borrar la marca y luego (Fin) para apagar el auricular.

Nota: Al recibirse una llamada no sonará la campanilla de aquellos auriculares que se encuentren en la función monitoreo. Se verá la llamada en la pantalla del auricular y se podrá contestar presionando

(TALK)

LLAMADA A TRES VÍAS (CONFERENCIA TELEFÓNICA)

La conferencia telefónica permite que tres personas (dos internas y una externa) puedan hablar al mismo tiempo.

- 1. Marque el número externo o conteste la llamada entrante.
- 2. La segunda persona debe presionar (TALK) en su auricular.
- 3. Las tres personas quedan conectadas simultáneamente.
- Cualquiera de los participantes puede salirse de una llamada presionando (END) y los demás quedarán conectados a la línea externa.
- 5. Al terminar la conversación, presione END

Nota: No pueden participar tres personas internas en una conferencia telefónica.

BLOQUEO DEL TECLADO

Se puede bloquear el teclado de los auriculares inalámbricos para evitar su uso no autorizado o para evitar presionar teclas accidentalmente.

Para bloquear o desbloquear el teclado:

- 1. Presione el botón (Encendido) por menos de 1 segundo. Un período más largo hará que se apaque el auricular
- 2. Una llamada entrante también liberará momentáneamente la protección del auricular Una vez concluida, el teclado se bloquea nuevamente.

Se debe efectuar la misma operación para bloquear o desbloquear el auricular.

Nota: Una llamada entrante desbloqueará la protección. Una vez finalizada la llamada, la protección se reactiva.

BLOQUE EL AURICULAR

- Presione **MENU** 1.
- 2. Introduzca el PIN del auricular y luego presione **OK**.
- 3 Desplácese hasta "Telephone Lock" (Bloquear teléfono) y luego presione OK

Se puede efectuar llamadas de emergencia al 911 mientras el teclado está bloqueado,

- Presione (TALK) (Hablar) para llamar al 911. 1
- Si presiona YES o (TALK), el auricular marcará automáticamente el 911. 2.
- Si presiona **NO** o ^(END), el auricular se bloquea nuevamente. 3.

TONO DE LOS BOTONES

El auricular emite un tono cada vez que se presiona un botón. Esta opción se puede activar o desactivar.

- Pressione **MENU** 1.
- 2 Desplácese hasta "Mobile Settings" (Configuración del móvil) y luego presione OK .
- 3 Desplácese hasta "Local Settings" (Configuración local) y luego presione
- 4 Desplácese hasta "Tones" (Tonos) y luego presione **OK**.

ALERTA DE FUERA DE ALCANCE

Si trata de efectuar una llamada al estar demasiado lejos de la base, escuchará una alerta de fuera de alcance (cuatro bips muy rápidos) La pantalla del auricular mostrará "Searching" (Buscando) y destellará el símbolo Fuera de alcance. Acérquese a la base e inténtelo de nuevo.

INDICADOR DE BATERÍA DESCARGADA

Cuando la batería comienza a descargarse, un icono de la pantalla del auricular comenzará a indicar el nivel de carga de la batería. Si el icono se torna transparente y se escucha un bip largo cada 30 segundos significa que la batería está descargada. Ponga el auricular en la base.

CÓMO UBICAR UN AURICULAR

- Presione Page/Locate (Localizar) en la base por un período de 1 a 4 segundos.
- 2. Sonará la campanilla de todos los auriculares, lo que le permitirá ubicarlos.
- 3. Para ubicar un auricular específico, presione (INT) (Intercomunicador) y el número asignado a él.

Capítulo 5: Identificador de llamadas/Registro de llamadas

El servicio de identificación de llamadas y de identificación de llamadas en espera son opcionales y los puede conseguir a través de su compañía de teléfonos local. El sistema genera un registro de identificación por cada llamada que ingrese y por cada una que quede en espera que incluya una identificación.

Esta información aparece en la pantalla del auricular. Muestra el nombre y el número de la persona que llama, la hora y la fecha en que se recibió.

Nota: Si no está suscrito al servicio de identificación de llamadas con nombre, éste último no aparecerá.

El registro de llamadas almacena la información de las llamadas externas entrantes. Este mantiene una lista de las últimas 50 llamadas recibidas. Las llamadas en espera también se incluyen en esta lista si contienen identificación de llamada en espera. Los registros se pueden ver uno a uno y se muestran en orden cronológico inverso, es decir, se muestra la más reciente primero y luego la anterior a ella.

Elementos almacenados en el registro de llamadas

Nombre de la persona que llama

Se muestra el nombre de la persona según los archivos de la compañía de teléfonos. Si se reciben más de 16 caracteres, sólo aparecen los primeros 16.

Fecha v Hora

Estas se reciben como parte del mensaje de identificación de llamadas y se almacenan en el registro. Si esta información no viene con el mensaje, se almacenará 1/1 y 0:00 en el registro a manera de fecha y hora.

Llamadas entrantes

La pantalla Llamadas entrantes muestra el nombre y el número después del segundo timbre.

Llamadas Bloquedas

Si aparece en pantalla "Private Call" (Llamada privada) significa que la llamada en curso tiene "bloqueada" la identificación. Lo que esto implica es que el nombre de la persona que llama (y el número) han sido bloqueados desde la fuente.

Desconocida

Si aparece en pantalla "Unavailable" o "Unknown Call" (Llamada desconocida) significa que la llamada en curso no tiene la identificación de la persona que llama. Esto implica que no existe disponibilidad de información en la fuente.

Registro de llamadas

El registro de llamadas contiene información de las llamadas externas entrantes. En él se puede ver las llamadas, marcar el número asociado, grabar los datos en los directorios del auricular, borrar datos o borrar toda la información del registro.

Se puede tener acceso al registro desde varios auriculares en forma simultánea. Ya que se puede borrar datos desde cualquier auricular, es posible eliminar un registro mientras es visto por otro auricular. Si esto sucede, dicho registro seguirá apareciendo en todos los auriculares hasta que se seleccione otro en el auricular.

Nota:

Cuando un auricular está en la función Registro de llamadas y se recibe una, éste desconecta el registro y muestra la información de la llamada entrante.

Cómo tener acceso al Registro de llamadas

- 1. Presione MENU
- 2. Seleccione "Call Log" (Registro de llamadas) y luego presione **OK**.
- 3. Utilice los botones 🖪 y 🖸 para ver el contenido del registro.

La información se encuentra contenida en las tres primeras líneas de la pantalla del auricular. La línea 1 muestra la fecha y hora de la llamada más reciente. La línea 2 muestra la identificación de la persona que llama (Nombre, Desconocido, Privado) seguido del número de veces que la persona ha llamado. La línea 3 muestra el número de quién llama seguido de los avisos Contestada (A) y llamada devuelta (C).

Nota:

Si no hay más de una llamada de la misma persona, no se muestra el número de veces en que ésta se ha recibido. Las llamadas repetidas se muestran sólo hasta nueve veces. Si no se recibió la fecha y la hora desde la red antes de la llamada, éstas no aparecen en la pantalla.

4. Para llamar a un número del registro, presione (TALK) cuando el número o el nombre aparezcan en la pantalla.

Nota:

Si se requiere un discado de diez dígitos en ese código de área local y sólo aparecen 6 en la pantalla, es probable que no se efectúe la llamada. Consulte los procedimientos de discado de su código de área local.

- 5. Para borrar un número del registro, presione **DEL** (Borrar) cuando el número o el nombre aparezcan en la pantalla.
- 6. Aparece la pantalla "Call Log End" (Fin del registro) 🔼 al final del mismo.
- 7. Presione **OK** para desocupar el auricular.
- Aparece "Unavailable" (Sin Información) en la pantalla cuando no se está suscrito al sistema de identificación de llamadas o no se recibió la información antes de contestar la llamada.

Menú del Registro de llamadas

- Para poder mostrar el menú, presione **OK** mientras ve un número del registro.
- Si se selecciona "Dial Number" (Marcar número) y hay línea disponible, el sistema efectúa la llamada. Aparece el aviso "Called back" (Llamada devuelta) aunque la línea esté ocupada.

Nota: Si se requiere un discado de diez dígitos en ese código de área local y sólo aparecen 7 en la pantalla, es probable que no se efectúe la llamada. Consulte los procedimientos de discado de su código de área local.

3. Si se selecciona "Save to Directry" (Grabar en directorio), el auricular desactiva el registro y guarda el número utilizando la información que se encuentra en el número del registro de llamadas. También se puede modificar un número del registro antes de grabarlo en el directorio. Si la memoria del directorio está llena, sonará un tono de error.

Nota: No aparecen en pantalla las opciones "Dial Number" (Marcar número) y "Save to Directory" (Grabar en directorio) cuando la llamada no contiene un número telefónico.

- 4. Si se selecciona "Delete Call Log" (Borrar Registro de llamadas) el sistema preguntará si se desea borrar todos los números. Presione or para borralos todos. Presione o menu para volver a la pantalla anterior sin borrar números.
- Si selecciona **OK** aparecerá "All Entries Deleted" (Se han borrado todos los números).

Chapter 6: Directorio

Los directorios permiten almacenar hasta 120 números frecuentemente usados en un formato de directorio telefónico. La cantidad de números a almacenar depende de la longitud de los nombres y números. Se puede transferir un directorio de un auricular a otro sin reemplazar el que ya existe. El directorio se almacena y se muestra en orden alfabético.

Acceso al directorio

- Presione el botón que se encuentra en la pantalla bajo DIRCTRY (Directorio).
- Utilice los botones para editar y marcar desde el directorio. Utilice Menu para marcar y editar los números.
- 3. Presione **OK** para ver las opciones siguintes:
 - Marcar número
 - Editar registro
 - Borrar registro
 - Enviar registro

Tratamiento de Registros individuales

Cómo seleccionar un registro

Una vez ingresados los nombres y números, puede marcarlos, editarlos o enviarlos a otro auricular.

- 1. Seleccione un registro individual.
- 2. Presione **DIRCTRY** (Directorio).
- 3. Desplácese hasta el nombre o presione el botón del teclado que comience con la letra en particular. (Por ejemplo, presione el botón 3 dos veces para aquellos que comiencen con la letra E)
- 4. Presione (TALK) para efectuar la llamada.

Cómo efectuar una llamada desde el directorio

- Para efectuar una llamada desde el directorio, presione DIRCTRY (Directorio)
 y desplácese hacia arriba y hacia abajo con los botones [5] y [6] para seleccionar el número a marcar. También se puede tener acceso a los nombres
 introduciendo la primera letra de ellos (Por ejemplo, presionando la tecla "6"
 dos veces se llega a la "n" de "Nancy").
- 2. Presione (TALK) para efectuar la llamada.

Cómo editar un registro

Cada directorio tiene dos campos que se pueden editar: El nombre y el número. Después de seleccionar el registro a editar, haga lo siguiente:

- Seleccione "Edit Entry" (Editar registro) y luego presione OK. El nombre comenzará a destellar, lo que indica que ya se puede modificar.
- 2. Para sobreescribir el nombre completo, simplemente introduzca el nuevo.
- Para modificar el número, presione hasta que el número comience a destellar.
- 4. Para sobreescribir el número completo, simplemente introduzca el nuevo.
- 5. Al concluir, presione **OK**.
- 6. Presione **OK** nuevamente para grabar el registro.

Cómo borrar un registro

- 1. Seleccione el registro a borrar y luego presione **OK**.
- 2. Seleccione "Delete Entry" (Borrar registro). Presione OK.
- 3. La pantalla muestra la frase "Entry deleted" (Registro borrado).
- 4. Presione (END)

Cómo enviar un registro

Para copiar un registro de un directorio en otro auricular, selecciónelo en el auricular que lo contenga (Por ejemplo, "Auricular 1").

- 1. Seleccione el registro a enviar y luego presione **OK**.
- 2. Seleccione "Send Entry" (Enviar registro). Presione **OK**.
- 3. Introduzca el número del auricular al que se enviará el directorio (Por ejemplo, "Auricular 2"), y luego presione **OK**.
- 4. Se escuchará la campanilla en el auricular 2.
- 5. Presione (TALK) en dicho auricular. Aparecerá la frase próximo registro del directorio (OK).
- 6. Presione END en el auricular 1.

Otras funciones del directorio

En vez de seleccionar un directorio individual, también puede modificar el directorio completo, borrarlo, enviarlo a otro auricular, o ver qué espacio libre le aueda.

Cómo borrar un directorio

- 1 Presione **MENU**
- 2. Selectione "Directory" (Directorio) y luego presione **OK**.
- 3. Seleccione "Delete Directoy" (Borrar directorio) y luego presione **OK**.
- 4. Cuando la pantalla muestre "Delete All Entries?," (¿Borrar todo?), presione
- Aparece en la pantalla la frase "All Entries Deleted" (Se han borrado todos los registros).
- 6. Presione END

Cómo enviar un directorio

Puede transferir todo el contenido de un directorio desde un auricular a otro, para así no tener que almacenarlos individualmente en cada uno de ellos. Si el auricular de destino no tiene suficiente espacio, sonará un tono de error y se interrumpirá la transferencia.

- 1. Presione **MENU**
- 2. Selectione "Directory" (Directorio) y luego presione **OK**.

- 3. Seleccione "Send Directory" (Enviar directorio) y luego presione **OK** .
- Introduzca el número del auricular al que se enviará el directorio y luego presione OK.
- 5. Se escuchará la campanilla en dicho auricular. Presione (TALK) en el auricular que recibe la llamada.
- 6. Al concluir la transferencia, presione (END) en el auricular que hizo la llamada.

Cómo verificar la memoria disponible

Con este procedimiento se puede ver la cantidad de memoria restante en su directorio.

- 1. Presione **MENU**
- 2. Seleccione "Directory" (Directorio) y luego presione OK.
- 3. Selectione "Check Memory" y luego presione **OK**.
- 4. La pantalla muestra el porcentaje de memoria disponible en el directorio.
- 5. Presione (END) (Fin).

Capítulo 7: Personalización del sistema

AJUSTE DE VOLUMEN

Volumen del auricular

- 1 Presione **MENU**
- Seleccione "Mobile Settings" (Configuración del móvil) y luego presione
 OKI.
- 3. Seleccione "Handset Volume" (Volumen del auricular).
- Utilice los botones
 y
 para ajustar el volumen del auricular. El auricular produce un tono de muestra en cada ajuste de volumen.
- 5. Al alcanzar el volumen deseado, presione **OK**.

Volumen de la campanilla

- 1 Presione MENU
- Seleccione "Mobile Settings" (Configuración del móvil) y luego presione
 OK.
- Seleccione "Ringer Settings" (Configuración de la campanilla) y luego presione OK.

Seleccione "External Ringer" (Campanilla externa) o "Intercom Ringer" (Cam-4. panilla del intercomunicador) y luego presione **OK**.

Nota: Ambas se pueden ajustar, pero no las dos al mismo tiempo.

- Seleccione "Ringer Volume" (Volumen de la campanilla) y luego presione 5. Se escucha la campanilla en el auricular.
- 6. Utilice los botones **I** y **I** para ajustar el volumen. Existen siete posiciones, incluyendo mute (silenciador). El volumen 6 es el más alto y el volumen 0 (el icono de una campana con una x encima) es el mute (Silenciador)
- 7. Presione **OK** cuando el volumen esté al nivel deseado. Se escuchará un tono de confirmación y la pantalla volvera al menú anterior.

Nota: Presione (END) (Fin) para salir sin efectuar cambios.

Tono de la campanilla

También puede cambiar el tono de los auriculares en forma individual

- Presione **MENU** 1.
- 2. Seleccione "Handset Settings" (Configuración del auricular). Presione OK.
- 3. Seleccione "Ringer Settings" (Configuración de la campanilla). Presione **OK**.
- 4. Seleccione "External Ringer" (Campanilla externa) o "Intercom Ringer" (Campanilla del intercomunicador). Presione **OK**.

Nota: Ambas se pueden ajustar, pero no las dos al mismo tiempo.

- 5. Seleccione "Ringer Pitch" (Tono de la campanilla) y luego presione **OK**. Se escucha la campanilla en el auricular.
- Utilice los botones v para modificar el tono. Existen 16 opciones. 6.
- 7. Presione **OK** cuando se alcance el tono deseado. Se escuchará un tono de confirmación y la pantalla volverá al menú anterior.



Nota: Presione (END) para salir sin efectuar cambios.

ASIGNAR NOMBRES

Los auriculares y la base se pueden personalizar con nombres de su elección. Esta característica le permite asociar un nombre con un auricular específico y también funciona como un identificador de llamadas internas (Intercomunicador)

Para asignar un nombre a la base:

Presione **MENU**

- Desplácese hasta "Base Settings" (Configuración de la base) y luego presione OK (Aceptar).
- 3. Seleccione Base Station 1 ó Base Station 2 y presione **(M.** Nota: Si sólo tiene una base, su nombre por defecto será Base Station 1.
- Seleccione "Change Name" (Cambiar nombre) y luego presione OK (Aceptar).
- Introduzca el nuevo nombre utilizando el teclado del auricular y luego presione OK (Aceptar). (Vea la sección siguiente sobre cómo escribir las mayúsculas, la puntuación y los espacios).
- 6. Selectione "Save Entry" (Guardar registro) y luego presione **OK** (Aceptar).
- 7. Presione (END) (Fin) para apagar el auricular.

Nota: Los nombres pueden ser de hasta 16 caracteres.

Para asignar un nombre al auricular:

- 1. Presione **MENU**
- Desplácese hasta "System Settings" (Configuración del sistema) y luego presione ok (Aceptar).
- 3. Introduzca el PIN del sistema. Nota: El PIN preprogramado es 0000 (ceros).
- Seleccione "Assign Name" (Asignar nombre) y luego presione OK (Aceptar).
- Seleccione el auricular a nombrar. En la pantalla aparecerá el nombre genérico del auricular; por ejemplo, "Intercom 1".
- 6. Introduzca el nuevo nombre utilizando el teclado del auricular y luego presione **OK** (Aceptar). (Vea las siguientes instrucciones relativas a las mayúsculas, la puntuación y los espacios).
- 7. Selectione "Save Entry" (Guardar registro) y luego presione **OK** (Aceptar).
- 8. Presione (Fin) para apagar el auricular.

Nota: Los nombres pueden ser de hasta 16 caracteres.

Introducción de mayúsculas y puntuación

Puede usar las teclas numéricas para introducir texto alfanumérico. Los nombres del directorio y del auricular son ejemplos de texto alfanumérico. Los números telefónicos y los códigos de área son ejemplos numéricos.

La tabla que está a continuación describe el botón asociado a un símbolo, letra, o número correspondiente. Por ejemplo, dependiendo de las veces que se presione, el botón "2" puede introducir una "a", "b", "c", "2" ó una "á"

Key Presses Table

Key	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th
1	Space	1								
2	a	b	c	2	Á	à	â	Ç		
3	d	e	f	3	É	è	ê			
4	g	h	i	4	Í	î				
5	j	k	1	5						
6	m	n	O	6	Ñ	ó	ô	œ		
7	p	q	r	S	7					
8	t	u	v	8	Ú	ù	û			
9	w	X	y	Z	9					
0	0	-		,	:	•	?	i	!	i
*	Shift	*	/	()	&	@			
#	#									

Para cambiar a mayúsculas, presione el botón * una vez y luego la tecla adecuada para el carácter alfabético deseado. El botón * no deja el sistema en mayúsculas. Debe volver a presionar el botón * para cambiar a mayúsculas con el próximo carácter. Para insertar un espacio (Por ejemplo, entre el nombre y el apellido), presione el botón "1" una sola vez. Para insertar uno de los símbolos de puntuación, presione "0" hasta que aparezca el que desea. Si se pasa la letra o el símbolo, siga presionándolo para seguir avanzando en la lista. Cuando aparezca el último, presione nuevamente el botón para ver la lista desde el principio.

CÓDIGOS DE ÁREA Y NUMERO QUE LLAMA

El sistema puede configurarse (en Configuración del sistema, Códigos de área) para utilizar el código de área local y hasta 3 códigos extra que no requieran "1". Estos códigos extra son utilizados en grandes ciudades donde las llamadas locales debe usar códigos múltiples.

- Si el código de área corresponde al área local, la llamada se clasifica como llamada local y el registro contendrá un número de 7 dígitos.
- Si el código corresponde a uno de los "extra", la llamada se clasifica como "extra". El sistema deja el código de área intacto al almacenar el número en el directorio o marcarlo desde el Registro de llamadas. El número será de 10 dígitos (Código de área + Número).
- Si el código no corresponde ni al código de área local ni a uno de los extra, éste no se clasifica ni como "local" ni como "extra". El sistema deja el número intacto y agrega un "1" al principio al almacenar el número en el directorio. Al

almacenar el número en el directorio o marcarlo desde el Registro de llamadas, el número será "1 + Código de área + Número".

Prefijos De Larga Distancia

Esta función le permite utilizar diferentes compañías para llamadas de larga distancia sin tener que cambiar su actual compañía o tener que introducir un prefijo alternativo en cada llamada de larga distancia. Si introduce un prefijo de larga distancia, el sistema Gigaset 2410 automáticamente añadirá el mismo a todas las llamadas que comiencen con el prefijo internacional o "1" más el prefijo del área. Este número se antepondrá en el caso de llamadas con el prefijo del área local o de hasta tres áreas a las que sea posible llamar sin tarifa de larga distancia.

El sistema Gigaset 2410 no incluirá este prefijo de la compañía si el prefijo de larga distancia está vacío o si se marca uno de los siguientes prefijos:

000-199	600	844	882
311	700	855	881
411	800	866	888
456	822	877	900
500	833	880	911

Es posible cancelar esta función de forma manual al introducir una nuevo prefijo de larga distancia.

Para introducir o editar el prefijo de larga distancia:

- 1. Presione **MENU**
- Desplácese hasta "System Settings" (Configuración del sistema) y luego presione ok (Aceptar).
- 3. Introduzca el PIN y presione **OK**. *Nota: El PIN preprogramado es 0000 (ceros).*
- Desplácese hasta "Long Dist. Prefix" (Prefijo de larga distancia) y presione
- 5. Introduzca el número deseado y presione **OK**.
- 6. Si precisa introducir una pausa en la secuencia (para dar tiempo a la compañía telefónica para acceder al servicio alternativo), desplácese hasta "Insert Pause" (Insertar pausa) y luego presione La letra "P" indicará que la pausa se ha insertado. Modifique o borre el registro usando la tecla
- Para guardar los cambios, seleccione "Save Entry" (Guardar registro) y presione OK.
- 8. La pantalla muestra la frase "Entry Stored" (Registro guardado).

Sacar un auricular del registro de la base

Este procedimiento cancela el registro de una auricular inalámbrico. Puede que se vea en la necesidad de cancelar un auricular, si decide transferirlo a otra base o si desea utilizar otro número de intercomunicador. En cualquier caso, deberá

cancelar el auricular y asignar el nuevo número durante el registro. Asegúrese que el auricular este conectado y ubicado cerca de la base.

- 1. Presione **MENU**
- Desplácese hasta "System Settings" (Configuración del sistema) y luego presione OK.
- 3. Introduzca el PIN del sistema. Nota: El PIN preprogramado es 0000 (ceros).
- 4. Desplácese hasta "Deregister" (Cancelar registro) y luego presione **OK**.
- 5. Un tono de confirmación indica que se ha completado la cancelación.

Nota: Si no ve "Deregister" (Cancelar registro) en el menú quiere decir que el auricular no está registrado en esa base.

LIMITED WARRANTY

This limited, non-transferable warranty is provided to the original purchaser. The product is warranted to be free from defects in materials and workmanship under normal installation, use, and service for period of one [1] year from the date of purchase as shown on the purchaser's receipt. Batteries provided [AA rechargeable Ni-Cd] are war-ranted to be free from defects at time of nurchaser.

Our obligation under this warranty is limited to repair or replacement (at our option) of the product or any part (s) which are detective provided that the product is returned to the original place of purchase or an authorized service location during the warranty period. Products returned must be accompanied by a copy of the purchase receipt. In the absence of a purchase receipt, the warranty period shall be one (1) year from the date of manufacture. Repair or replacement of the product is your sole and exclusive remedy. If the product is repaired, reconditioned component parts or materials may be used. If the product is replaced, we may choose to replace it with a new or reconditioned product of the same or similar design. The repaired or replacement product will be warranted for either (a) 90 days or (b) the remainder of the original one (1) year warranty period, whichever is loner.

This warranty does not apply to defects outside of our control, including but not limited to acts of God, fire, flood, damage while in transit to service facility. We do not warranty that the product will be compatible with any telephone equipment or systems or party lines.

This warranty shall be void if the product is damaged as a result of defacement, misuse, abuse, neglect, accidents, destruction, or alteration of the serial number, improper electrical voltages or currents, repair, alteration, or maintenance by any person or party other than our authorized service facility or any violation of instructions furnished by us. This warranty is also void if this product is removed from the country in which it was purchased by the original purchaser, if it is not used in a country which it is not registered for use, or if it is used in a country for which it was not designed. Due to variations in telephone systems and communications laws, this product may be illegal for use in some countries. We assume no responsibility for damages or penalties incurred resulting from the use of this product in a manner or location other than that for which it is intended.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED. ANY IMPLIED WARRANTIES, INCLUING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHATABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN LIMITED WARRANTY. WE DISCLAIM ANY LIABILITY FOR DAMAGES FOR LOSS OF USE OF THE PRODUCTS, LOSS OF TIME, INCONVENIENCE, INJURY TO ANY PERSON, OR DAMAGE TO PROPERTY CAUSED BY THE PRODUCT, LOSS OF REVENUE OR PROFIT, OR DAMAGES FOR ANY FAILURE TO PERFORM, IN NO EVENT SHALL WE BE LIABLE FOR ANY SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES EVEN IF WE ARE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

This warranty is the sole and exclusive warranty provided for the product. There are no other express warranties. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Si desea obtener mayor información sobre donde puede adquirir el sistema Siemens Gigaset 2410 o alguno de sus accesorios, acuda a nuestra pagina WEB en http://www.siemenscordless.com o llame al teléfono (877) 267.3373.

Si precisa de asistencia técnica con su sistema Gigaset 2410, llame al teléfono (888) 777.0211, o, mediante acceso TDD, al teléfono (888) 777.0209.

División de sistemas de comunicación SEPTIEMBRE 1999

Siemens y Gigaset son marcas registradas de Siemens AG. Equipos de comunicación es una división de productos de información y comunicación de Siemens, LLC. RBRC™ es marca registrada de Rechargeable Battery Recycling Corporation.

La información aquí contenida esta sujeta a cambios y Siemens se reserva el derecho a efectuar modificaciones sin previo aviso al diseño de los equipos o sus componentes a medida que se desarrollan nuevos métodos de ingeniería y fabricación.

Numero de Order: PB241010

Numero de Parte: A30883-N2410-A33

© Siemens 1999 Todos los derechos reservados.